

COVER•PRO™ Installation Instructions



Congratulations on your purchase of the *COVER•PRO* spa cover and lift system. Please take the time to read the instructions before assembling the *COVER•PRO*.

Begin by centering your spa cover on your spa. Attach the longer tie down straps (located on back of spa cover) on the side the cover will be stored. Determine the location (deck or cabinet mount) where the mounting brackets will be attached, approximately 7" from the true corner.

Box Contents:

- 2 - Pending Arms with VersaMount™ Brackets
- 2 - Hand Grip Bars
- 2 - Safety Cables
- 2 - Rubber Gaskets
- 2 - Foam Hand Grips
- 2 - O-Rings
- 1 - Pack of Screws

Installation Instructions:

1. Cut zip ties carefully to remove **Hand Grip Bars** from box. Slide installed **O-rings** up to prepare for **Pending Arm** Assembly.
2. Slip **Foam Hand Grip** just beyond button spring (Figure 1) of each **Hand Grip Bar** leaving button spring exposed. *A damp bar makes this easier.*
3. Remove **Pending Arms** and install the loop of one **Safety Cable** over the end of each **Pending Arm**. (Figure 2)
4. Install a **Hand Grip Bar** into each **Pending Arm** and slide **O-ring** along to meet it. (Figure 2) *Align the flat sides exactly and exert accurately aligned pressure for best results.*
5. Locate **Keyway Coupler** inside cover at the fold and prepare for connection by pressing the vinyl to the coupler opening. Carefully cut an "X" in the center of the coupler. Expose the coupler and install **Rubber Gasket** onto the coupler. Press gasket firmly against the spa cover vinyl. (Figure 4)
6. Match the flat side of the **Hand Grip Bar** to the **Keyway Coupler** and slide bar into coupler. (Figure 4) Depress button spring to snap into hole provided in coupler.
7. Adjust **Pending Arm** length to meet your location for attachment. Secure VersaMount™ bracket, with screws provided, to the deck or cabinet.
8. Secure **Hand Grip Bar** to **Pending Arm** by drilling a 5/32" hole through each pilot hole provided in **Pending Arm**. Insert self drilling screw and tighten screw to secure **Pending Arm** to **Hand Grip Bar**.
9. Slide **Foam Hand Grips** up to compress **Rubber Gaskets** against the cover. (Figure 5)
10. With cover in the upright stored position, extend **Safety Cable** horizontally to the upper cabinet. Attach with stainless steel screws provided, leaving cables slightly lax.
11. While the cover is in the upright position, install the provided machine screw and washer into threaded hole of the VersaMount™ bracket. This will secure spring leg in the down position and help assist lift.
12. Repeat steps 5-11 on other side of spa.

Tip: To lessen spa cover drag, we recommend a little silicone spray on acrylic spa edge where the cover slides off the spa. Spray on silicone spray and let dry for 5 minutes. Wipe off excess spray with a dry cloth.

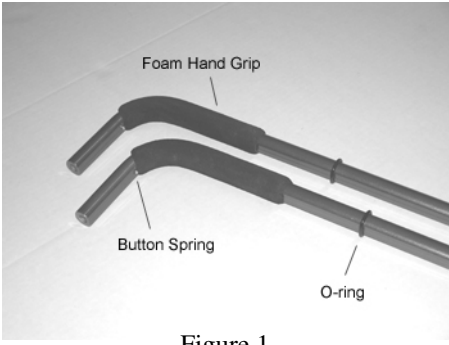


Figure 1

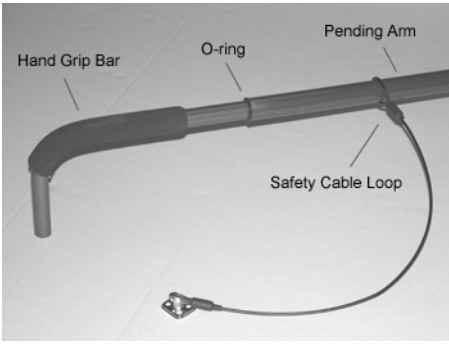


Figure 2

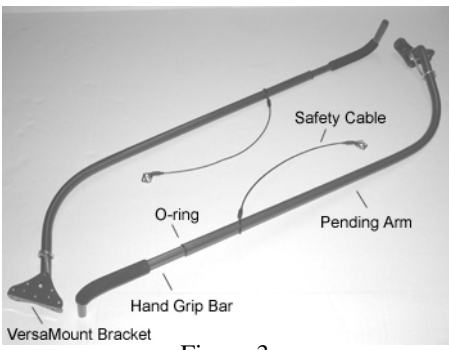


Figure 3

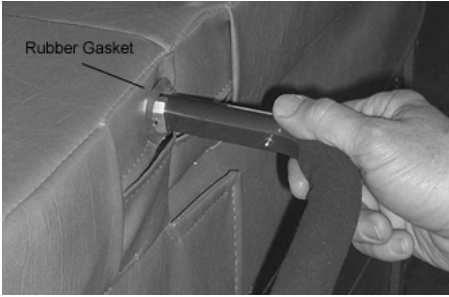


Figure 4

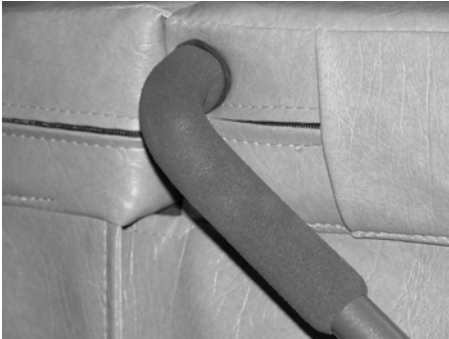


Figure 5